


Corner Desktop (-DT2) Assembly Instructions



1. Work with the corner desktop turned upside down. Place on a smooth surface to protect the top surface of the corner desktop.

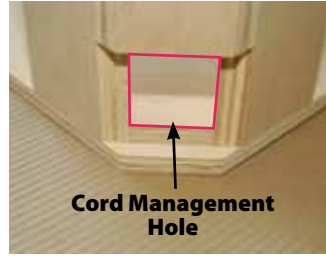

2. Position the rear support leg at the back corner of the corner desktop that has no trim moulding. Make sure the cord management opening is towards the bottom of the desk where the rear support leg attaches to the corner desktop, and the plastic button feet are at the top of the rear support leg.



3. Attach the rear support leg to the corner desktop using two 1 1/4" course thread wood screws. Be careful not to countersink the screws too far.



4. You will now attach the corner desktop assembly to the two side units next. The corner desktop will attach to the sides of the units where there is no trim moulding.



5. The next step requires two people. Pick up the corner desktop/support leg assembly and turn it right-side up. Position the corner desktop next to the side units. Align the corner desktop to the side unit. While one person is keeping the corner desktop and side unit aligned...



6. The second person will attach the corner desktop to the side unit using three 1 1/4" course thread wood screws which you screw through the pre-drilled holes in the cleat into the side unit.



7. Repeat step 6 to the remaining side unit.



8. Next the support strips get installed to the base units and rear support leg.



9. Approximately 12" from floor, attach the support strip to the back edge of the base unit using two 1 1/4" course thread wood screws. Repeat for second support strip.



10. Then each support strip gets attached to the rear support leg using two 1 1/4" course thread wood screws.



11. The completed corner desktop and side units are now ready for use.